



It's Easy To Measure and Install a ZIP-ROLL Screen!

STOCK SIZES	
8' wide x 7' high	
9' wide x 7' high	
10' wide x 7' high	
12' wide x 7' high	
15' wide x 7' high	
16' wide x 7' high	
8' wide x 8' high	
9' wide x 8' high	
10' wide x 8' high	
16' wide x 8' high	

ZIP-ROLL Screens can be used with garage doors, breezeways, patios, porches and more! ZIP-ROLL Screens come in all standard residential and commercial garage door sizes and custom sizes can be made to fit most openings up to 22' wide x 14' high. All screens will be oversized by a few inches to accommodate various openings.


For example: A 9' wide x 7' high screen will fit openings from 8'6" to 9'4" wide x 6'11" to 7'2" high.

HOW TO MEASURE

Note: ZIP-ROLL Screens must be mounted on a TOP FACE BOARD. If there is no face board available, secure a 1" x 4" board at the top of the opening to mount the screen on. ZIP-ROLL Screens must be level on all sides when mounted.





For 90° Corner Openings: Measure the door jamb opening width and height. Refer to Figure 1.

For 45° Corner Openings: Openings with 45° top corners require special placement of the vertical zippers. Zippers should be aligned with the top corner of the 45° angle as shown in the illustration. In addition to measuring the door jamb opening width and height, you must also provide the width between the zippers.


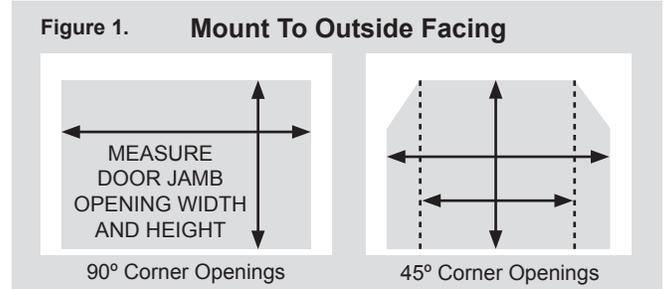


INSTALLATION INSTRUCTIONS

1. Remove ZIP-ROLL Screen from the carton and unfold on the floor with the head strip on top. Assemble bottom plastic tubes with connectors and slide into the bottom pocket of the screen. Refer to Figure 2.
2. Measure across the top door facing and mark the center of the opening. Refer to Figure 3A. Then measure and mark the center of the screen on the head strip and trim the head strip to the desired length by cutting equal amounts from each end. See Figure 3B. **Note:** Allow 1" extra on each end to overlap side molding.

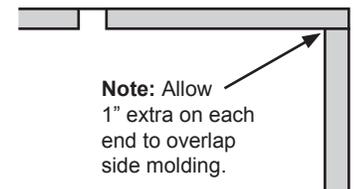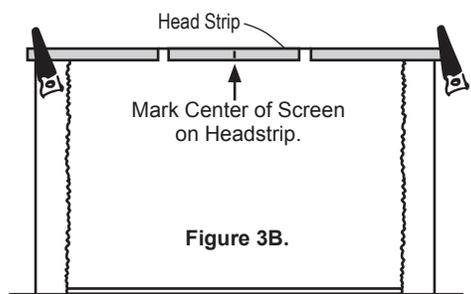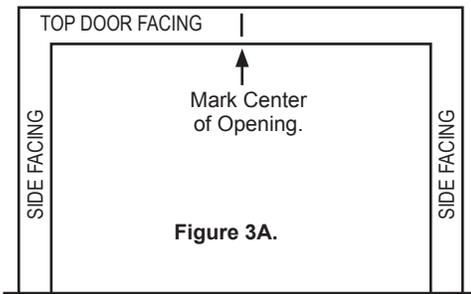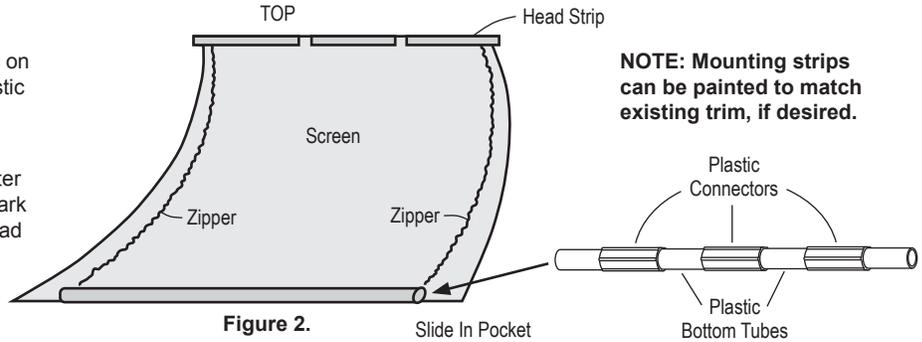

3. Start nails (provided) in the head strip, three nails to each section. Refer to Figure 4. Pick up screen and align the center mark on the screen head strip over the center mark on the door facing. Ensure that the head strip is level and nail the center head strip to the door facing. Then nail the outer sections of the head strip to the facing.
4. Start nails in one of the side mounting strips about 8" apart. Place the mounting strip on the side door facing over the screen, making sure to hold the screen snug but not tight. Be sure that the zipper on each side is straight and fully zipped down. Then nail the top half of the mounting strip in place. With a saw, trim the lower half to fit and then nail in place. Repeat on the opposite side. See Figure 5.
5. Take a sharp knife or razor blade and trim the excess screen by running a blade along the outside edge of the mounting strips. See Figure 5.
6. Attach the cord line cleat to the wall with screws provided at a convenient location near the cord lock pulley. **IMPORTANT: To deter use by small children, attach the cord line cleat approximately five to six feet above floor level.**

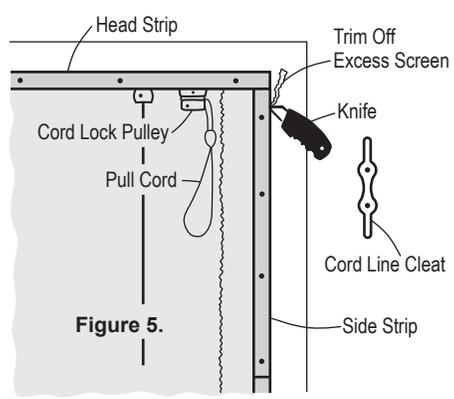 

OPERATION

Your ZIP-ROLL Screen is now ready to operate. To raise the ZIP-ROLL Screen, unzip both zippers to the top (upper) position, then pull the right side of the cord to raise the screen. To lock the screen in the up (open) position, pull the cord to the left at the cord lock pulley mechanism. To unlock and lower the screen, pull the cord to the right and the screen will unroll to the closed position. Wrap the cord around the cord line cleat.